

---

## **OPERATING INSTRUCTIONS**


Cooker hood  
EN (AU) (NZ)

CW4934S / 4000


# Contents

<b>Pictograms used .....</b>	<b>3</b>	<b>Maintenance .....</b>	<b>11</b>
<b>Safety .....</b>	<b>4</b>	Cleaning .....	11
<b>Your cooker hood .....</b>	<b>7</b>	Lighting .....	12
Dear customer! .....	7	<b>Installation .....</b>	<b>13</b>
Description user interface .....	7	.....	13
<b>Operation .....</b>	<b>8</b>	Preparations for installation .....	16
Switching the light on and off .....	8	Built-in .....	17
Switching extraction on and off .....	8	<b>Environmental aspects .....</b>	<b>21</b>
Switching on intensive setting .....	8	Tips for energy-efficient cooking with	
Switching on the timer .....	8	hoods .....	21
Clean Air function .....	9	Disposal of the appliance and packaging ....	21
Button lock function .....	9	<b>Your notes .....</b>	<b>22</b>
Cleaning filters .....	9		


The following symbols are used throughout the manual and they have the following meanings:

 INFORMATION!


**Information, advice, tip, or recommendation**

 WARNING!


**Warning – general danger**

 ELECTRIC SHOCK!

**Warning – danger of electric shock**

 HOT SURFACE!

**Warning – danger of hot surface**

 DANGER OF FIRE!

**Warning – danger of fire**

It is important that you carefully read the instructions.

## WARNING!

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE!

### **Safe use**

The manufacturer cannot be held liable for any damage resulting from failure to follow the safety instructions and warnings.

Damage caused by incorrect connection, incorrect fitting, or incorrect use is not covered by the warranty.

## WARNING!

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Accessible parts may become hot during use. Young children should be kept away.

Children should be supervised to ensure that they do not play with the appliance.

Do not modify this appliance.

Children are not to be allowed near the device unsupervised.

Do not flambé under the range hood.

- This appliance is only designed for household use.
- Always provide adequate ventilation!
- There shall be adequate ventilation of the room when the range hood is used at the same time as appliances burning gas or other fuels.
- When the range hood and appliances supplied with energy other than electricity are simultaneously in operation, the negative pressure in the room must not exceed 4 Pa ( $4 \times 10^{-5}$  bar).

- Local regulations concerning the discharge of air have to be fulfilled.
- **Never use a steam cleaner for cleaning the appliance.**  
Only clean the appliance when switched off. The steam of a steam cleaner could reach the conducting parts and cause an electrical short.

### ELECTRIC SHOCK!

Avoid the risk of electric shock; make sure the appliance is switched off before cleaning the appliance.

- Only use the appliance inside the home.
- Do not use the cooker hood if the grease filter has not been fitted properly!
- Do not lean against the cooker hood.
- Never use the cooker hood as a working surface unless this is indicated explicitly.
- Grease and oil are inflammable when overheated. Remain in the cooking area when preparing meals.
- To prevent hot fat from catching fire, you should only deep-fry under continuous supervision.
- The cooker hood should be cleaned regularly both on the outside as well as the inside (at least 1 x per month). Insufficient cleaning or a delay in the replacement of filters can cause a fire hazard.
- Clean the filters on time.
- The grease filters can become hot during use. After cooking wait at least 30 minutes before cleaning.
- **Please note!** Intensive use can lead to condensation on the cooker hood. Condensation is simple to remove with a dry cloth.
- Follow the instructions in the manual for cleaning or replacing the grease filters and/or carbon filters!



## DANGER OF FIRE!

- There is a risk of fire if the instructions for cleaning or replacing grease filters and/or carbon filters are not followed.
  - Through grease deposits in the metal grease filter. Never work with open flame under the appliance (eg. flambéing). Always use the appliance with the metal grease filter. Clean the grease filter regularly.
  - Through overheated fat or oil. Never extinguish a fire with water; always use a fire blanket, lid or plate.
- 
- The appliance may have sharp edges; please be careful during cleaning.
  - The light emitted by LED lights is very dazzling and can damage the eyes. Do not look directly into the switched on LED lights for longer than 100 seconds.
  - When washing grease filters in the dishwasher it is recommended to use a short, non-intensive programme. Check the grease filter after washing in the dishwasher for wear (loose material). Wear can occur as a result of frequent washing. If loose material is visible, replace the filters in order to prevent this loose material from ending up in the food that is cooked.
  - Do not use the appliance in temperatures below 5 °C.
  - Keep a 20 cm separation distance to the appliance.

## Dear customer!

Welcome to our growing ASKO family!

We are proud of our appliances. We hope that this appliance will be an appreciated and dependable aid for many years to come.

Please read the operating instructions before use. They include general tips, information about the settings and adjustments you can make, and the best way to take care of your appliance.

### TIP!

You can find the most recent version of the instructions for use on our website.

Enjoy your cooking!

## Description user interface



1. Switching on/off and dimming the lighting
2. Switching extraction on and off
3. Speed setting 1
4. Speed setting 2
5. Speed setting 3
6. Intensive mode
7. Timer function/Clean Air function
8. Filter indication

### NOTE!

If you have a cooker hood with a carbon filter, you should activate the carbon filter indicator as described in the 'Cleaning filters' paragraph.

## Switching the light on and off



1. Short touch the lighting key.  
*The light switches on at maximum strength.*
2. Press and hold the lighting button for approximately 3 seconds to dim the lighting strength.
3. To set the lighting back to maximum strength, quickly press and release the lighting button.
4. To turn off the lighting when the light is dimmed, press and hold the lighting button for approximately 3 seconds.
5. To turn off the lighting when the light is at maximum strength, quickly press and release the lighting button.

## Switching extraction on and off



1. Quickly press and release the on/off button.  
*The cooker hood will switch on at the lowest setting.*
2. Select the desired extraction setting by pressing the corresponding speed setting buttons.
3. Press the intensive mode button to select the highest setting (boost) (see switching on intensive setting).

## Switching on intensive setting



1. Quickly press and release the intensive mode button.  
*The intensive setting (boost setting 'B') is switched on for 6 minutes. The intensive mode button will flash during this period. The original extraction setting will be reactivated after this period.*
2. Press the on/off button or the intensive mode button to switch off the intensive setting.

## Switching on the timer



1. Quickly press and release the timer button.
  - *The timer button will light up.*
  - *The cooker hood will switch off automatically after 15 minutes.*
  - *If the lighting is lit, it switches off automatically once the timer is finished.*
2. Switch off the timer function in the meantime by pressing the timer button again.

## NOTE!

The timer function cannot be activated when the intensive setting is switched on.

## Clean Air function



The Clean Air function allows you to freshen the air in your kitchen for a maximum of 24 hours at level 1.

1. Switch off the cooker hood by pressing the on/off button.
2. Press and hold the Clean Air button for approximately 3 seconds.
  - *The cooker hood switches on automatically for 10 minutes every hour at the lowest speed setting.*
  - *During this period, the on/off button will be lit continuously while the speed setting 1 button and the Clean Air button will flash.*
3. Switch off the Clean Air function in the meantime by pressing and holding the Clean Air button for approximately 3 seconds, or by switching off the cooker hood by pressing the on/off button.

## NOTE!

The Clean Air function cannot be activated when the intensive setting or the timer function is switched on.

## Button lock function



The button lock function allows you to lock the buttons for cleaning purposes or for child safety.

1. Switch off the cooker hood by pressing the on/off button.
2. Press and hold the on/off button for approximately 5 seconds until all buttons will flash from left to right.  
*All buttons are locked.*
3. To unlock the buttons, press and hold the on/off button again for approximately 5 seconds.

## Cleaning filters

### Saturation of grease and carbon filters



The filters should be replaced or cleaned when the filter indicator is lit or flashing. See chapter 'Maintenance'.

# Operation

## **Grease filter**

The filter indicator will light up after 100 operating hours.

*The grease filters should then be cleaned.*

## **Carbon filter**

The filter indicator will flash after 200 operating hours.

*The carbon filter should then be replaced.*

## **Reset the filter indicator**

1. Switch off the cooker hood by pressing the on/off button.
2. Switch off the lighting by pressing the lighting button.
3. Reset the memory by quickly pressing the filter indicator button.
  - *All indicators will flash three times.*

## **NOTE!**

If you have a cooker hood with a carbon filter, you should activate the carbon filter indicator.

## **Switching on carbon filter indicator**

1. Switch off the cooker hood by pressing the on/off button.
2. Press and hold the filter indicator button for approximately 5 seconds until all buttons flash twice.

*The carbon filter cleaning indicator is activated.*

## **Switching off carbon filter indicator**

1. Switch off the cooker hood by pressing the on/off button.
2. Press and hold the filter indicator button for approximately 5 seconds until all buttons flash once.

*The carbon filter buttons is deactivated.*

## Cleaning

### WARNING!

**Important!** For all maintenance, first, switch off the mains power to the cooker hood by pulling the plug out of the socket or by turning off the home's master switch. The hood needs to be cleaned regularly, both inside as well as outside (at least as often as the grease filter).

Do not use abrasive cleaning products. Do not use alcohol!

If the instructions regarding cleaning the appliance or replacing the filters are not followed, this can cause a fire. These instructions must be followed! The manufacturer is not liable for damage to the hood or fire damage resulting from incompetent maintenance or from non-adherence to the safety instruction above.

### Cooker hood

Clean the cooker hood with soapy water and a soft cloth.

Then rinse with clean water. Do not use aggressive cleaning agents such as caustic soda. The cooker hood finish stays in good condition if it is buffed periodically following the application of wax.

### NOTE!

#### Stainless steel cooker hoods

 
Do not use scouring pads or other abrasive cleaners on stainless steel cooker hoods. Finish with a non-abrasive, non-polishing agent and buff the stainless steel in the direction of the grain.

### Filter cleaning indicator

The filter indicator will light up after 100 operating hours.

- The grease filters should then be cleaned.
- Metal grease filters should be cleaned once a month (or when indicated by the filter cleaning indicator) using a neutral cleaning agent, either by hand or in the dishwasher on a short, low-temperature program.
- Place the grease filters with the openings facing downwards in the dishwasher so the water can drain out of the filter. Aluminium grease filters become dull as a result of dishwasher cleaning agents. This is normal and does not affect the working. Allow the filters to drain well before replacing.
- Reset the memory by long touching the – (minus) key until the filter indicator goes off.


### Cleaning grease filters

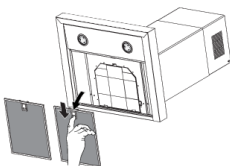

1. Switch off the motor and lighting.
2. Remove the grease filters from the hood by pulling the special handle.

# Maintenance
 
## Replacing the carbon filter

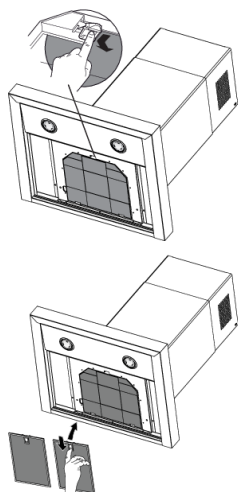

1. The grease filters should first be removed before replacing the carbon filter.
2. Slot the notches at the back of the filter in the specially designed opening of the cooker hood.

## NOTE!

The carbon filter must always be used if the cooker hood does not have an outlet.

Using a carbon filter creates more sound than when using the cooker hood with an outlet.

The carbon filter's operation is optimal at a lower motor speed. You should, therefore, avoid using the boost function.

Saturation of the carbon filter will eventually occur after more or less prolonged use, depending on the type of cooking and how frequently the grease filter is cleaned.

It is necessary to replace the carbon filter when indicated by the filter indicator.

Do not wash or reuse the carbon filter. Saturated carbon is not environmentally friendly, change the filter regularly.

## Lighting

### WARNING!

- The hood is fitted with LED lights. An authorized technician must replace these. Do not attempt to replace the LED lights yourself.
- The lamp in this household appliance is only suitable for illumination of this appliance. The lamp is not suitable for household room illumination.

## Safety regulations

### WARNING!

This appliance should only be connected by a registered installer.

- Always follow the installation instructions in the installation manual provided.
- Check the appliance for transport damage. Do not connect a damaged appliance.
- Faulty parts may only be replaced by original parts. The manufacturer can only guarantee that original parts meet safety requirements.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Always use the original Supply cord to connect the appliance.
- The electrical connection must comply with national and local regulations.
- The wall plug socket and plug should always be accessible.
- If a stationary appliance is not fitted with a supply cord and a plug, or with other means for disconnection from the supply mains having a contact separation in all poles that provide full disconnection under overvoltage category III conditions, the means for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules. This is also applicable for appliances with a supply cord and plug when the plug is not accessible after installing the appliance. Using an omnipolar switch with a contact separation of at least 3 mm fitted in the fixed wiring will fulfil this requirement.
- Means providing full disconnection under overvoltage category III conditions must be incorporated in the fixed wiring in accordance with AS/NZS 3000.

# Installation

- The appliance should not be connected to the mains via a multi-plug adapter or extension cable, as the safe use of the equipment cannot be guaranteed.

-  **WARNING!**

Extraction hoods and other appliances that extract cooking vapours can affect the safe operation of appliances that burn gas or other fuel (including those in other rooms) by backflowing combustion gases. These gases can potentially lead to carbon monoxide poisoning. After installing an extraction hood or other vapour extractor, the operation of appliances with flue gas extraction must be tested by a competent person to ensure that the combustion gases do not flow back.

- The air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels.

 **WARNING!**

Never open the casing of the appliance.

- Disconnect the appliance from the mains supply before starting any repair work.
- We advise you to wear protective gloves when assembling the cooker hood because of the possible sharp edges.
- The distance between the lowest point of the cooker hood and the supporting surface for the cooking vessels gas hob should be at least 60 cm.
- If the instructions of the gas hob specify a greater distance, this has to be taken into account.

 **WARNING!**

Failure to install screws or fixing devices in accordance with these instructions may result in an electrical hazard.

If the safety instructions and warnings are not followed, the manufacturer cannot be held responsible for any resulting damage.

 
If you decide to discontinue using the appliance because of a fault, we recommend you cut off the cable after removing the plug from the plug socket. Take the appliance to your municipality's waste disposal site.

**Place the appliance in an environment that meets the following conditions:**

- Ambient temperature range: +5....+40 °C;
- Humidity: 30....70% RH;
- Maximum altitude: 2000 meters above sea level.


# Installation

## Preparations for installation

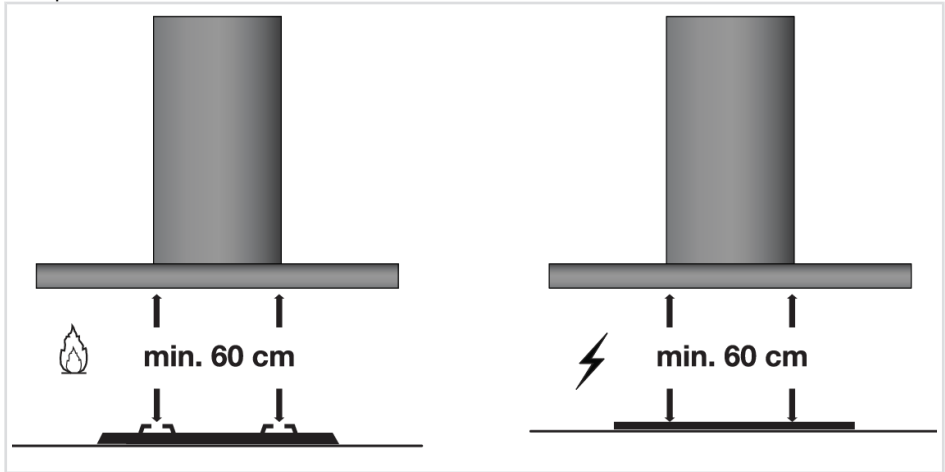

### Electrical connection

 max. 120 cm

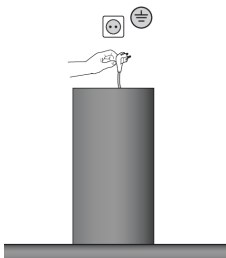

This appliance is manufactured in class I; it must therefore be connected to the earth system.

Make sure the supply voltage ratings correspond with those stated on the appliance data plate. The connection to the mains is carried out as follows:

- BROWN = L phase
- BLUE = N zero
- YELLOW/GREEN = Earth


During the electrical connection, make sure that the electrical socket is equipped with an earth connection.

This cooker hood has been provided with a power plug. When installing the hood, make sure that this plug remains accessible.


### WARNING!

 If you want to make a fixed connection, ensure that an omnipolar switch with a contact separation of at least 3 mm is fitted in the supply line.




## Appliance dimensions




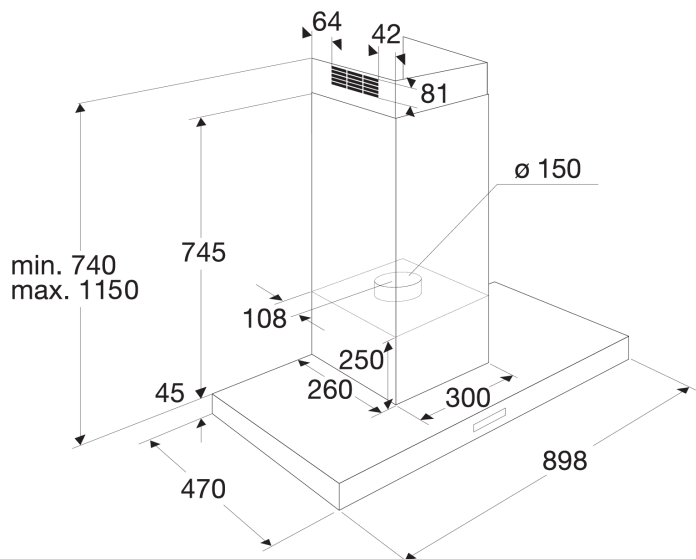


## Built-in




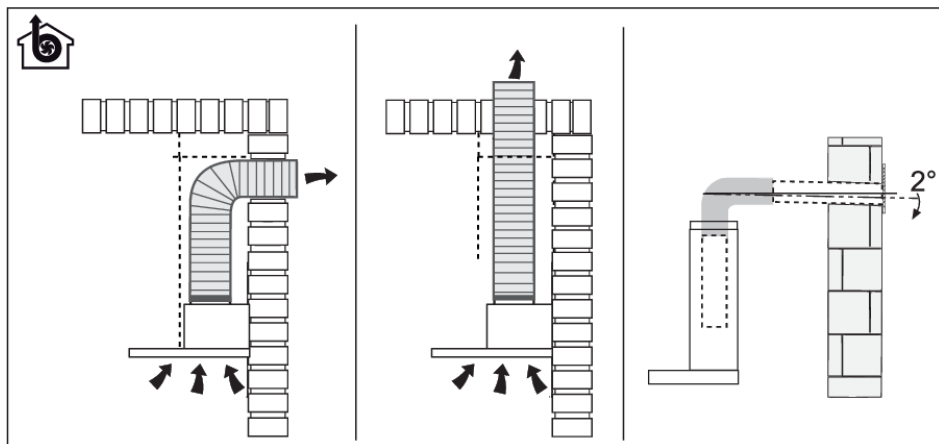 


# Installation

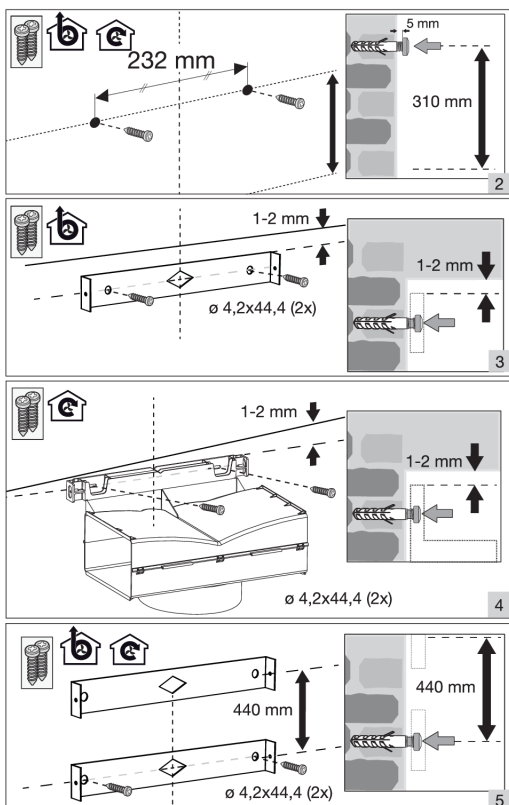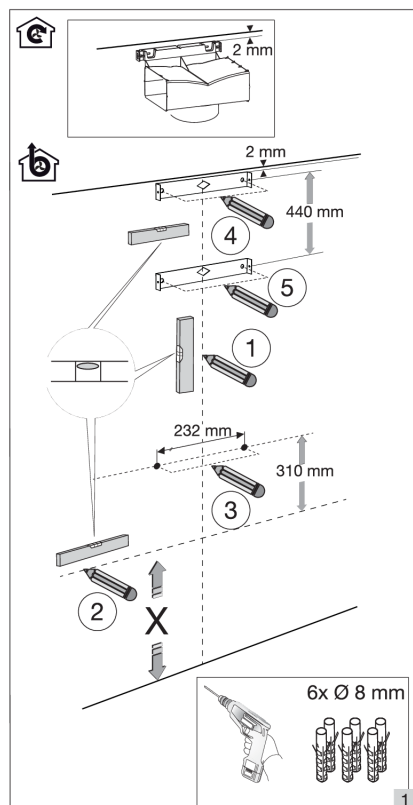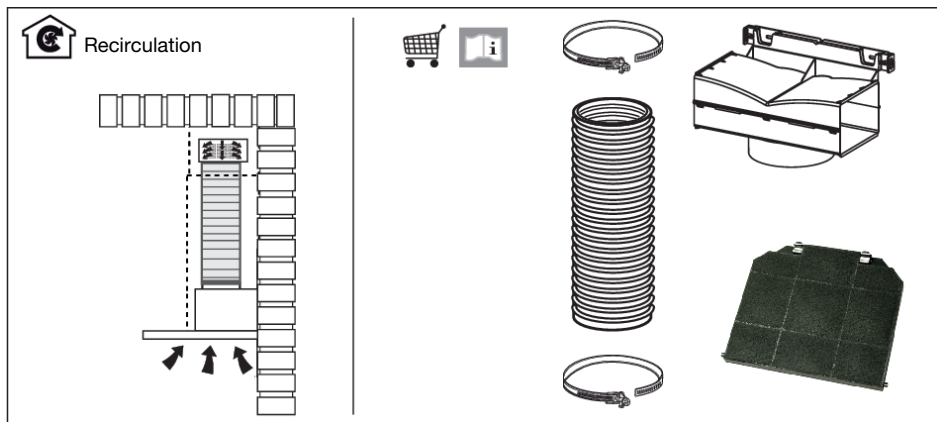   

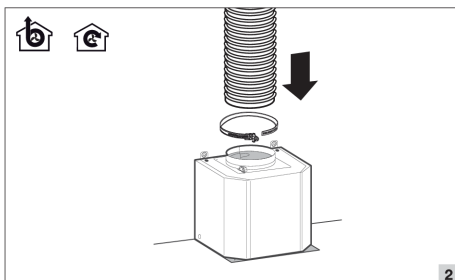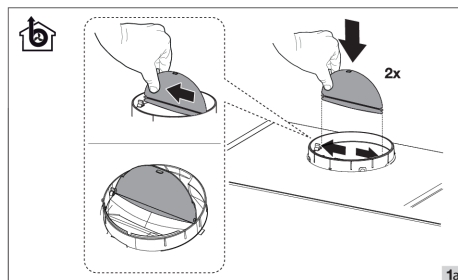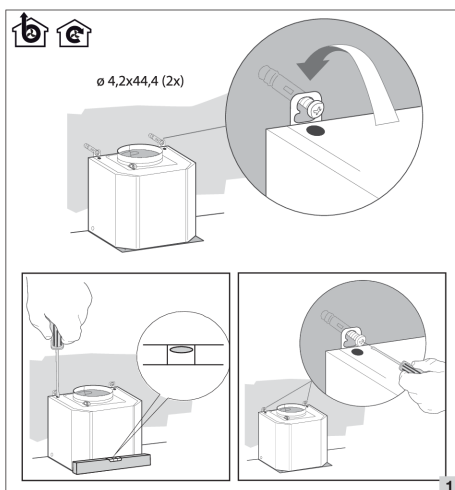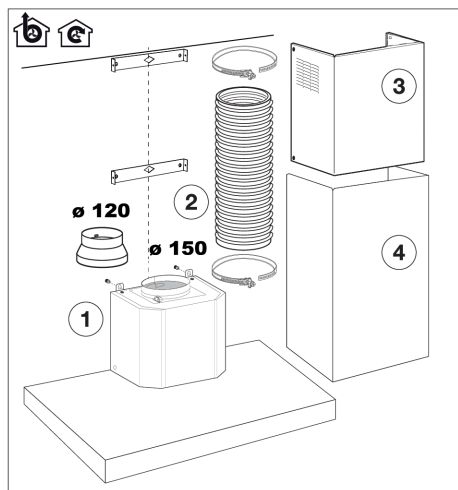    

# Installation

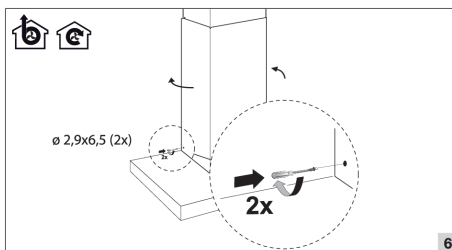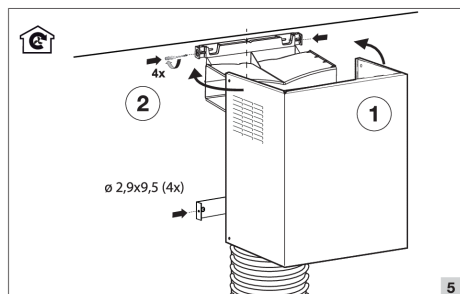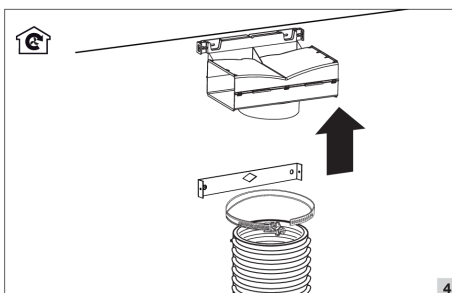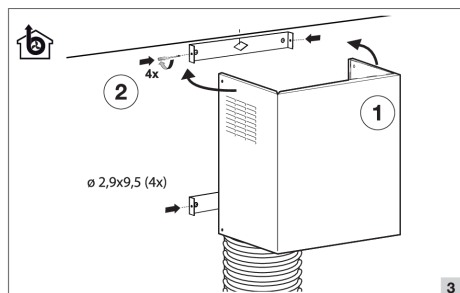    

## Tips for energy-efficient cooking with hoods

- Use a low extractor setting and use the highest setting (boost) if necessary.
- A well-ventilated kitchen makes the range hood more efficient.
- Clean filters regularly and replace filters when needed to keep the filter efficiency high, as a saturated filter cannot perform and leads to longer usage times.

 
## Disposal of the appliance and packaging

Sustainable materials have been used during manufacture of this appliance. This appliance must be disposed of responsibly at the end of its service life. Ask your local authorities for more information about how to do this.

The appliance packaging is recyclable. The following may have been used:

- cardboard;
- polyethylene film (PE);
- CFC-free polystyrene (PS rigid foam).

Dispose of these materials in a responsible manner and in accordance with government regulations.

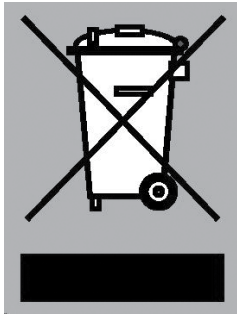

The product has been marked with a crossed-out dustbin symbol to remind you of the obligation to dispose of electrical household appliances separately. This means that the appliance may not be included with normal domestic refuse at the end of its service life. The appliance must be taken to a special municipal centre for separated waste collection or to a dealer providing this service.

Separate collection of household appliances helps to prevent any potential negative impact on the environment and on human health caused by improper disposal. It ensures that the materials of which the appliance is composed can be recovered to obtain significant savings in energy and raw materials.



### Declaration of conformity

We hereby declare that our products satisfy the applicable European directives, orders and regulations, as well as the requirements stated in the referenced standards.



[www.asko.com](http://www.asko.com)



897930-a5



*We reserve the right to make changes.*