

Senza Plus

 
Basin Mixer

Curved Spout

harmony 




Lead Free

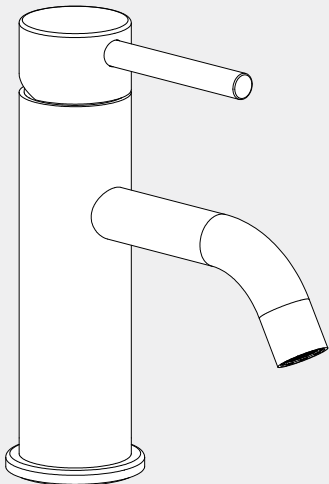

Version : 202511

 Drawing

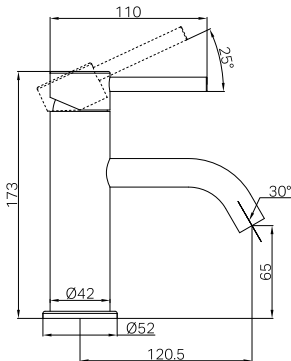

Specifications

Watermark License
WM-060073
Temperature Rating
Min 1 °C - Max 75 °C
Pressure Rating
Min 150kpa - Max 500kpa

Finish & SKU

- | | | |
|--|---|--|
|  Chrome
25C021CH |  Brushed Nickel
25C021BN |  Gun Metal
25C021GM |
|  Matte Black
25C021MB |  Brushed Gold
25C021BG | |

Packing Includes

 
- 1x Basin Mixer
- 1x Installation Kits

 
*Dimensions are nominal measurements only.

INSTALLATION INSTRUCTIONS


GENERAL INSTRUCTIONS:

- Installation must be carried out by a licensed plumber and must comply with AS/NZS 3500.
- All pipework must be flushed before installation to remove debris.
- Fit in-line filters on both hot and cold water inlets to protect the ceramic cartridge.
- Do not pressure test the system with the mixer installed.
- Do not remove the ceramic cartridge during installation.
- After installation, check all joints for leaks and ensure smooth operation.
- A tempering valve must be installed when used with solar or wet-back hot water systems.
- If flow is restricted, clean the aerator and filter washers.
- Ensure a waterproof seal is achieved between the mixer and mounting surface.
- Flexible hoses are fixed and must not be replaced with non-original parts.
- All hygiene outlets must deliver water at a safe temperature in accordance with local regulations.

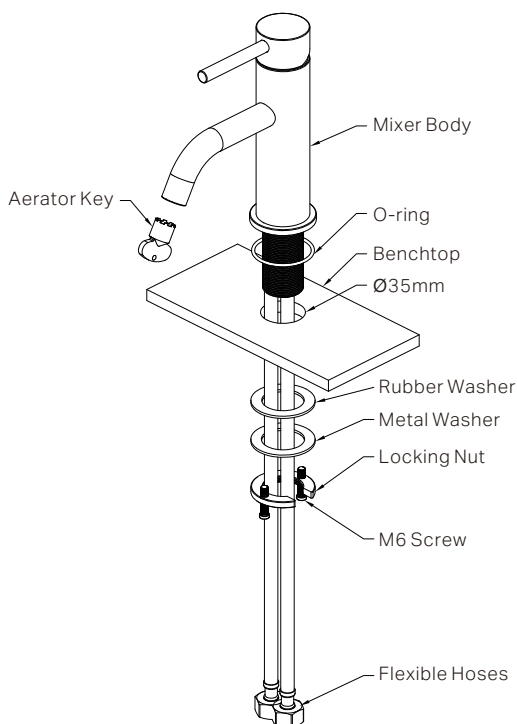

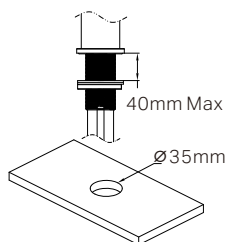


 01. Pre-drill or create a mounting hole with a diameter of 35mm in the benchtop. Please note that the benchtop thickness should not exceed 40mm.

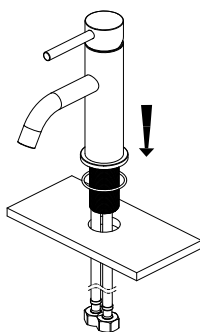

02. Pass the flexible hoses through the mounting hole in the benchtop.

 Note: Ensure that the O-ring is properly seated in the bottom groove of the base plate to prevent water leakage.

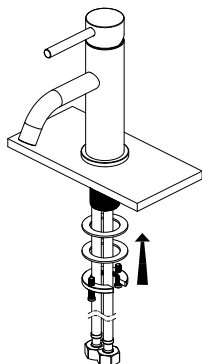

03. Install the rubber washer, metal washer, and locking nut in sequence, then tighten the two M6 screws. Ensure the mixer is securely mounted on the tabletop. Avoid over-tightening to prevent damage to the components.

4. Connect the **Flexible Hoses** to the corresponding **Hot and Cold Water Supply Valves**.

5. Check all connections for leaks. If any fittings are leaking, shut off the water as necessary to stop the leaks. Contact the supplier for warranty claim.

MAINTENANCE AND CARE:

- Regularly check the mixer and connections for signs of wear or leaks.
- Clean the tap with mild soapy water to maintain its appearance, avoiding harsh chemicals and abrasive materials.

