 


60cm Freestanding Dishwasher

ODWF6015XCOM

omega

Designed to Enhance
EST. 1981



Introducing your new 60cm Freestanding Dishwasher

Wash Programs

 
 
	Auto Wash: This auto sensing program adjust the cycle based on water clarity.
	Intensive: For heaviest soiled crockery, such as pots, pans, casserole dishes and dishes.
	Heavy: For heavily soiled loads, such as pots, plates, glasses and lightly soiled pans.
ECO	ECO: This program is for normally soiled loads at rated capacity.
	Glass: Suitable for lightly soiled glassware.
	90 min: A fast 90 minute daily program for lightly soiled dishes.
	Rapid: A quick 30 minute wash suitable for lightly soiled dishes with no drying stage.
	Prewash: Rinses dishes that you plan to wash later, loosening food particles and stains.

Additional Functions

	Auto Door Opening: When set, the door will open automatically at the end of the program wash cycle.
	Extra Clean: This cycle will increase the main wash, rinse and drying times for particularly heavily soiled or hard-to-clean dishes.
	Express Wash: Decreases the wash and rinse cycles whilst increasing the dishwasher's power.
	Half Zone: When only at half capacity, you can choose this function to wash items that are only in the Upper Basket or Lower Basket
	Delay Start: Increase the Delay Start time in 1 hour increments up to 24 hours.
	Child Lock: Press and hold the Half Zone And Delay Start buttons 3 secs. to lock or unlock the buttons on the control panel.

Adjusting the Upper Basket Height

1. To raise the upper basket, lift the upper basket at the center of each side until the basket locks into place.
2. To lower the upper basket, lift the adjust handles on each side to release the basket, lowering it into position.

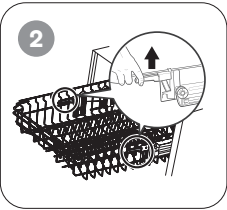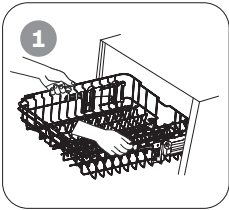

Details

Product Dimensions (W, D, H mm): 598 × 600 × 845
Warranty Period: 3 Years

Support

Telephone: 1300 11 HELP (4357)
Email: support@residentiagroup.com.au

