
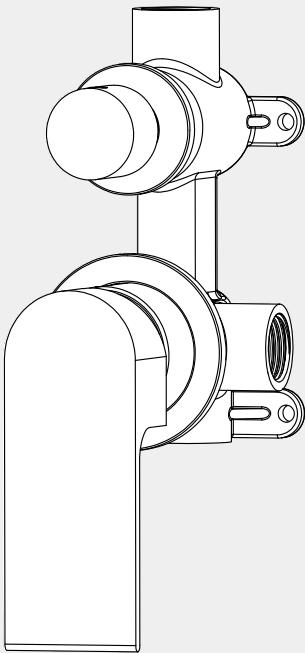


Bianca Shower Mixer With Divertor Separate Back Plate

Nero

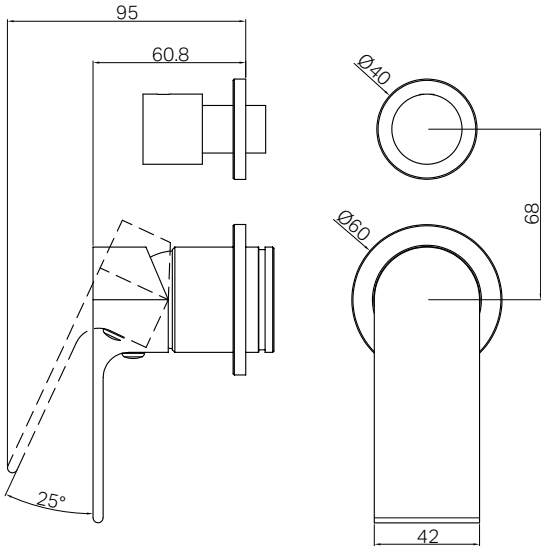

Versions:202405



Drawing	Specifications	Group Item						
	Watermark License WM-060073 Temperature Rating Min 1°C-Max 75°C Pressure Rating Min 150kpa - Max 500kpa Finish & SKU <table><tr><td>● Chrome NR321511gCH</td><td>● Gun Metal NR321511gGM</td><td>● Brushed Nickel NR321511gBN</td></tr><tr><td>● Matte Black NR321511gMB</td><td>● Brushed Gold NR321511gBG</td><td>● Brushed Bronze NR321511gBZ</td></tr></table>	● Chrome NR321511gCH	● Gun Metal NR321511gGM	● Brushed Nickel NR321511gBN	● Matte Black NR321511gMB	● Brushed Gold NR321511gBG	● Brushed Bronze NR321511gBZ	1x Universal Body 1x Trim Kits Only
● Chrome NR321511gCH	● Gun Metal NR321511gGM	● Brushed Nickel NR321511gBN						
● Matte Black NR321511gMB	● Brushed Gold NR321511gBG	● Brushed Bronze NR321511gBZ						

*Dimensions are nominal measurements only.

Installation Instruction For Body Only



GENERAL INSTRUCTIONS:

- This product must be installed by a licensed plumber. Ensure that your plumbing installation conforms to the Australian/New Zealand Standard AS/NZS 3500.
- All pipework must be thoroughly flushed prior to the installation of the mixer. In-line filters must be fitted on both hot and cold supplies to prevent foreign particles from damaging the ceramic cartridge.
- All outlets used primarily for personal hygiene must deliver water at a safe temperature in accordance with regional regulations.

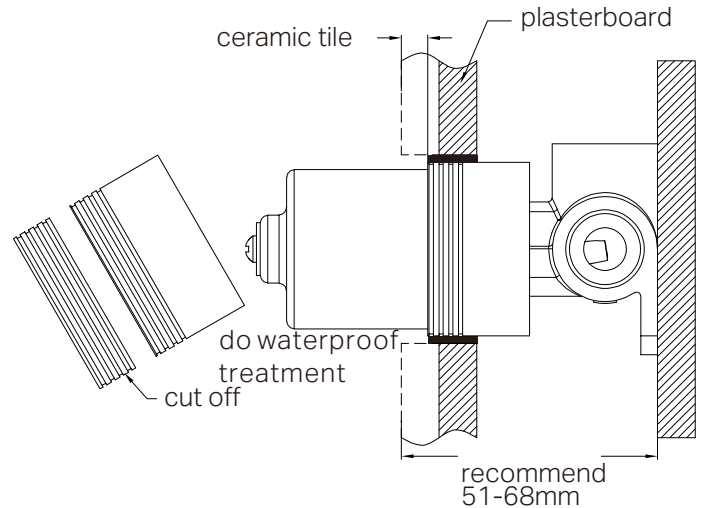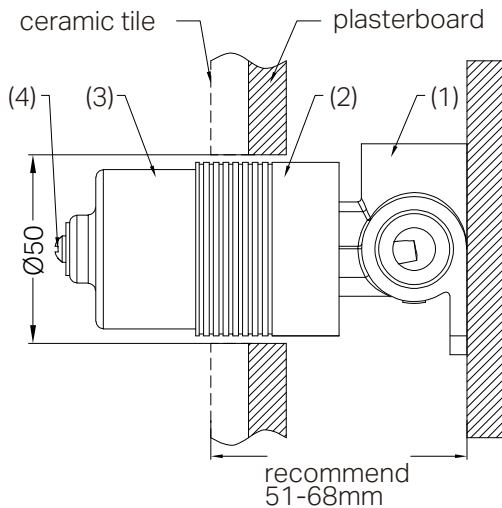


1. Secure the mixer body (1) to the nogging, ensuring an installation depth of 51-68mm from the nogging to the ceramic tile. Note: Do not remove the protective sleeve (2) from the mixer body.
2. Connect the cold and hot water supply lines and perform a leak test.
3. Drill a $\varnothing 50$ mm hole in the plasterboard for mixer body installation, and then position the plasterboard as shown in the above image.

4. Mark the protective sleeve (2) 4-7mm from the ceramic tile surface to the body and waterproof the gap between the plasterboard and body.
5. Remove the self-tapping screw, washer, and protective sleeve, then cut the sleeve at the marked point.
6. Reattach the self-tapping screw, washer, and protective sleeve.

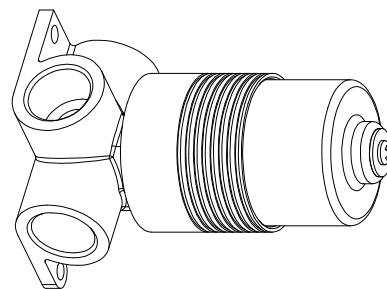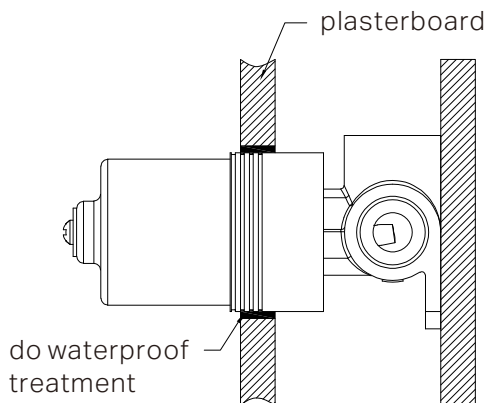


7. Waterproof the gap between the plasterboard and body.


Installation Instruction For Trim Kits Only

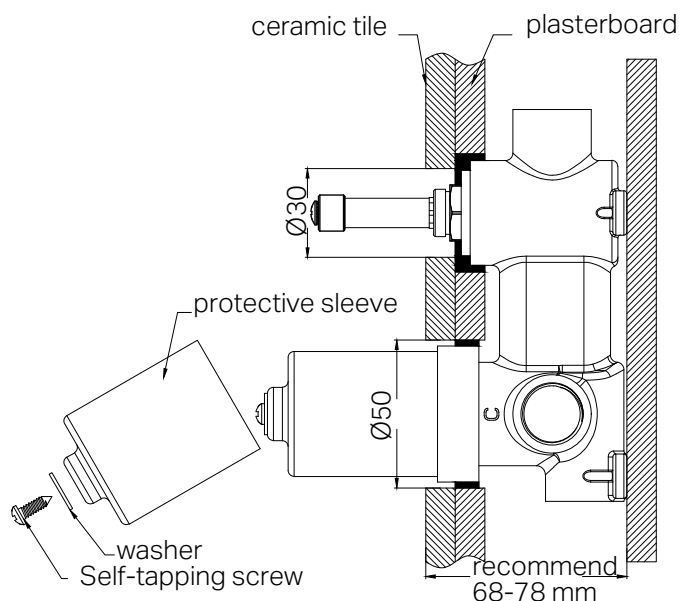

1. Drill a Ø50mm and a Ø30mm hole in the ceramic tile, then position it as shown in the above diagram.
2. Undo the self-tapping screw to remove the protective sleeve.

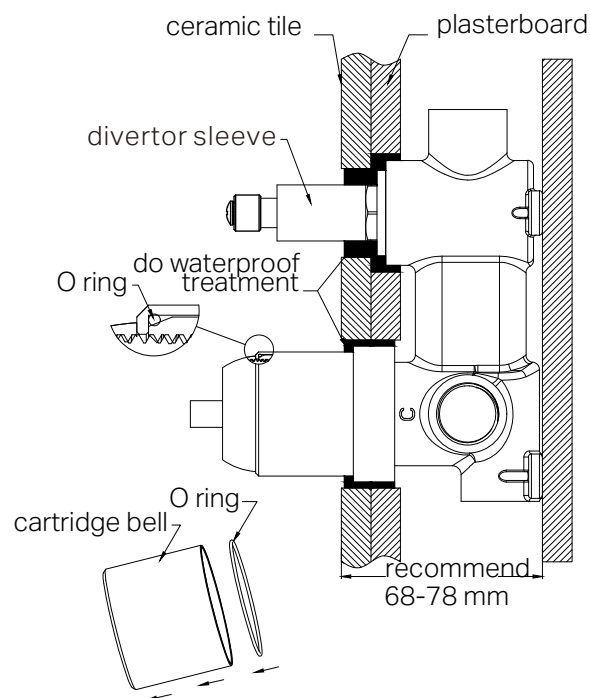

3. Insert the O ring to the Cartridge Bell groove, and slide the Cartridge bell onto cartridge and slide diverter sleeve onto diverter cartridge.
4. Apply waterproof treatment to the area indicated in the diagram above.
5. Thread the dressing cap on the cartridge bell.

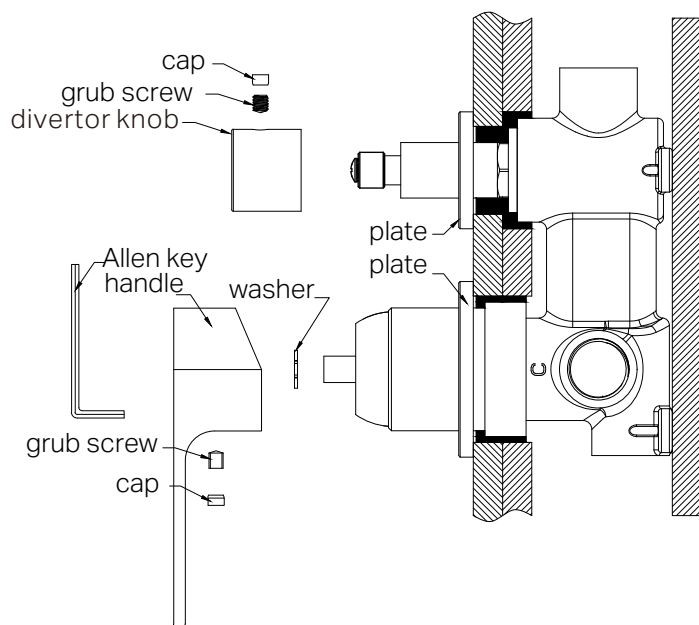

6. Slide the backplate onto body.
7. Attach the washer to cartridge rod, position the handle, tighten it with a grub screw using an Allen key, and cap the grub screw hole.
8. Attach the diverter knob to diverter cartridge, tighten it with grub screw using Allen key, and cap the grub screw hole.

MAINTENANCE AND CARE:

- Regularly check the mixer and connections for signs of wear or leaks.
- Clean the tap with mild soapy water to maintain its appearance, avoiding harsh chemicals and abrasive materials that may damage the finish.

FINAL INSPECTION:

- Ensure the tap operates smoothly and that there are no leaks at the connections.
- Clean the area and the newly installed tap with a soft cloth to remove any installation residues.

Nero

