
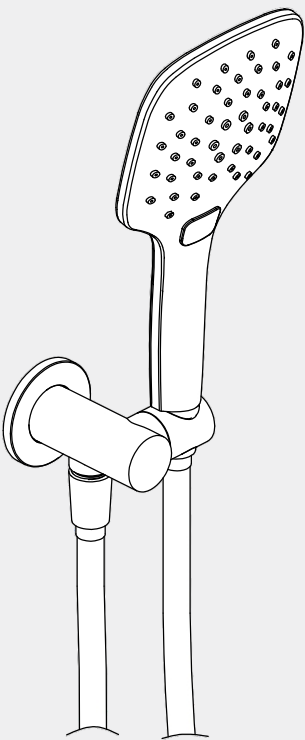


Rain Square 3 Function
Shower On Bracket

Nero

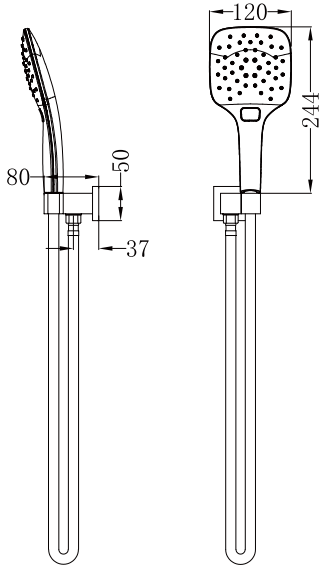

Versions:202311

Drawing	Specifications	Packaging Includes
	SKU NR306 Watermark License WM-060093 Temperature Rating Min 1°C-Max 75°C Pressure Rating Min 150kpa - Max 500kpa	1x Hand Shower(Built- In Check Valve) 1x 1.5m Hose 1x Bracket
	Finish  Chrome NR306CH  Matte Black NR306MB	
*Dimensions are nominal measurements only.		

Nero

Installation Instruction


Important

All products must be installed by licensed plumbers.

All pipework must be thoroughly flushed prior to installation, as foreign materials may block the flow regulating device and reduce the flow of water.




1. Apply thread sealant or teflon tape on the outlet thread.

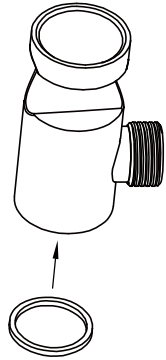


2. Put washer into bracket body.

Apply thread sealant or teflon tape

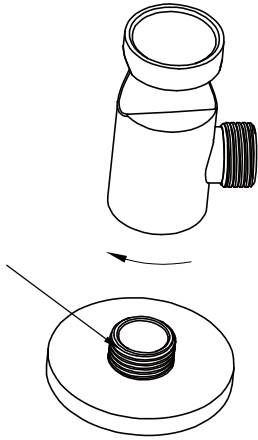

3. Pull back plate onto the outlet, and screw shower bracket body onto outlet.

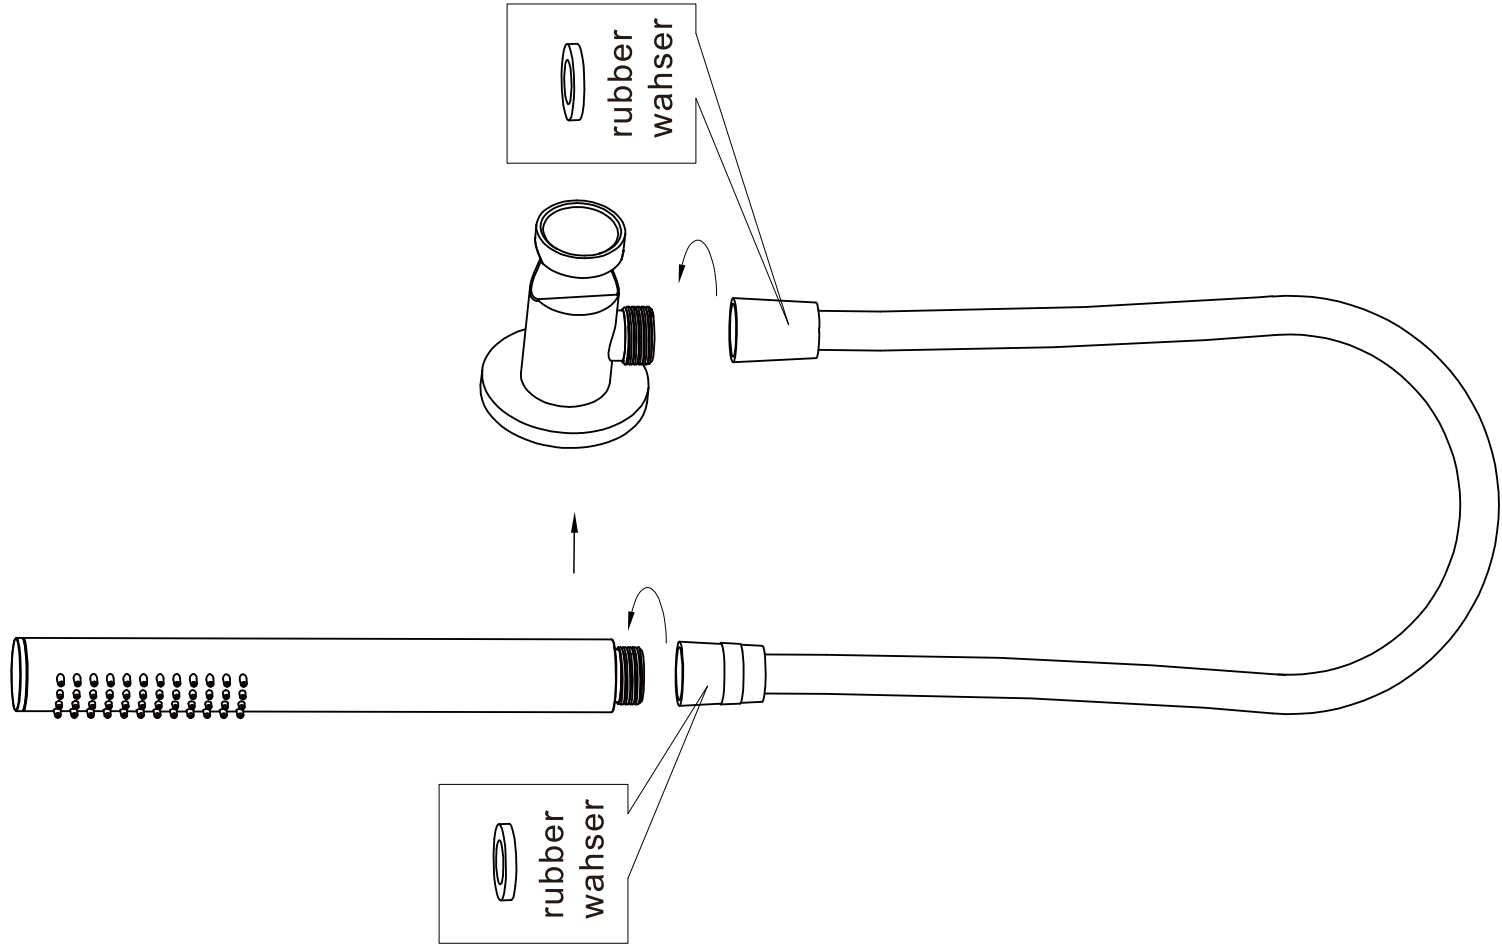

4. Connect bracket and hand shower with hose. TEST & CHECK FOR LEAKS.

Nero

info@nerotapware.com.au
nerotapware.com.au

11-13 Buontempo Road
Carrum Downs Vic 3201

