


Bassini Plus Care

32mm Grab Rail

And Adjustable Shower Rail Set


900mm



Versions:202511



Drawing

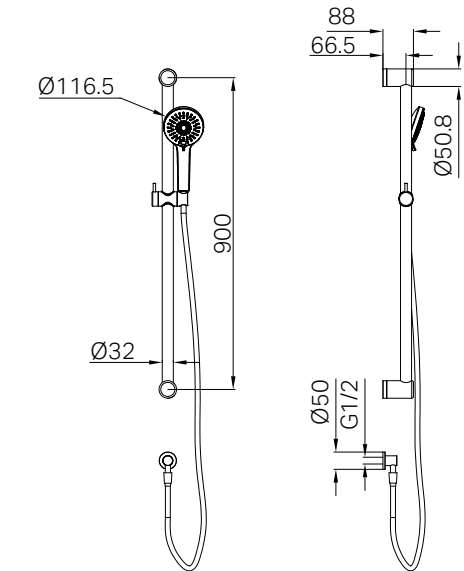

Specifications

Watermark License
WM-060093
Temperature Rating
Min 1°C-Max 75°C
Pressure Rating
Min 150kpa - Max 500kpa

Packaging Includes

- 1x 900mm Grab Rail
- 1x Hand Shower
- 1x Elbow(Built-In Dual Check Valve)
- 1x 1.5m PVC Hose
- 1x Installation Kits

Finish

- | | | |
|---|--|--|
|  Chrome
25C077CH |  Gun Metal
25C077GM |  Brushed Nickel
25C077BN |
|  Matte Black
25C077MB |  Brushed Gold
25C077BG | |

*Dimensions are nominal measurements only.


INSTALLATION INSTRUCTION

GENERAL INSTRUCTIONS AND WARNINGS


- These rails are designed to be mounted onto wall studs or masonry walls.
- Installation is recommended to be completed by qualified trades person who complies with the AS 1428.1-2009 design for access and mobility standard.
- It is recommended rail location is determined by a qualified occupational therapist or trained professional to the AS 1428.1-2009 standard.
- Correct installation is required to ensure safe, long term operation. Incorrect mounting can result in reduced capacity of the rail which can result in injury to user and damage to the wall.

INSTALLATION STEPS

1.

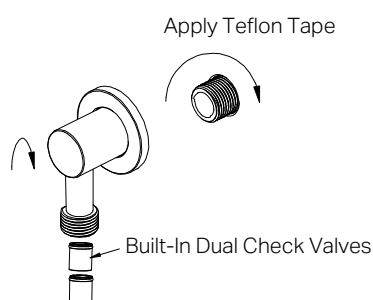

2.

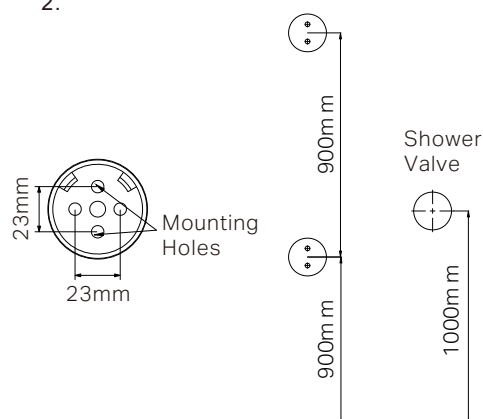


1. Apply Teflon tape to the outlet pipe threads. Slide plate onto elbow, and screw elbow onto outlet.
Note: Dual-check valve are pre-installed in the elbow.

2. Locate wall studs, install into at least one stud.


Place wall seal/mounting bracket on wall at correct height over centre of stud and mark the positions of mounting holes on the wall.

Note: This shower product must be installed at a height that complies with NZS 4121. Please refer to the above figure for the correct installation height.


3.

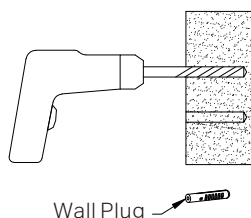

4.

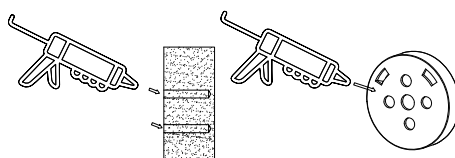

5.

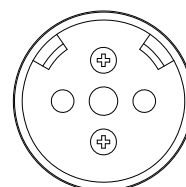


3. Drill pilot holes into wall stud approximately 60mm deep to suit mounting screws (and wall plugs if required).

Tip: 3mm hole for screws into timber or 8mm hole for wall plugs.

4. Apply small amount of silicon to mounting bracket and wall in and around the screw holes.


5. Install mounting brackets by screwing onto wall.

Tip: Use appropriate mounting screws for the wall stud material, supplied screws are for timber wall studs.

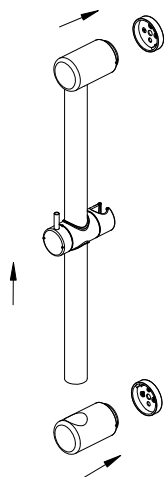


6. Slide the shower slider onto rail, then slide rail tubes into end brackets and push onto wall brackets, refer to above picture.

Tip: Rail length can be cut down to a smaller size, simply use an angle grinder, hacksaw or pipe cutter then deburr the end with a file or grinder and reinsert into the end bracket.

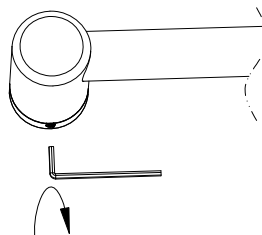


7. Tighten grub screws with Allen key.

Tip: If rail rattles, loosen end bracket, twist slightly and tighten.

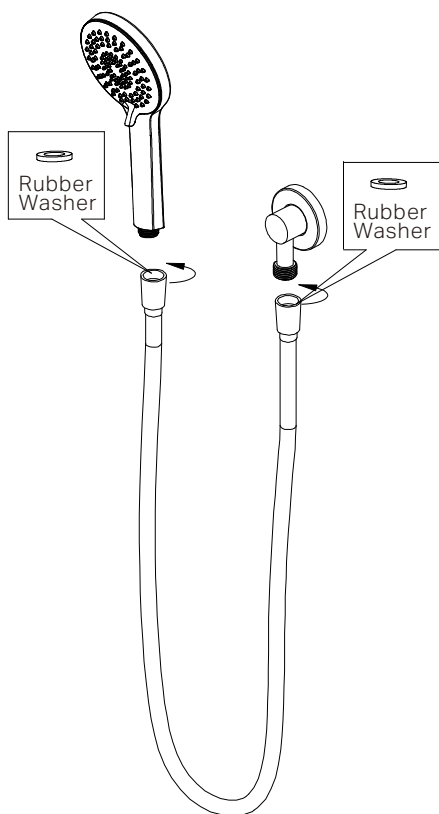

8. Connect hand shower and elbow by shower hose.

Tip: There are two rubber washer in the shower hose.

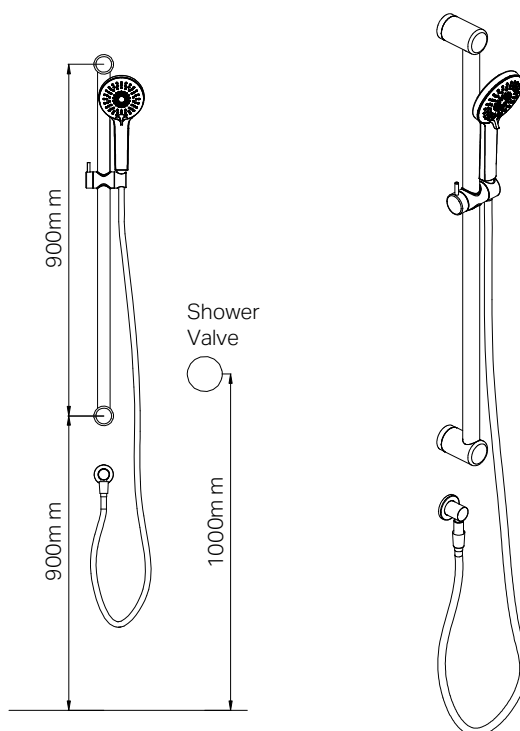

9. Test and check for leaks.

Note: The hand shower holder must be adjustable within a height range of 1000mm to 1700mm.

