



Bassini Plus Care
32mm T-Bar Grab Rail
And Adjustable Shower Set
1100X750mm

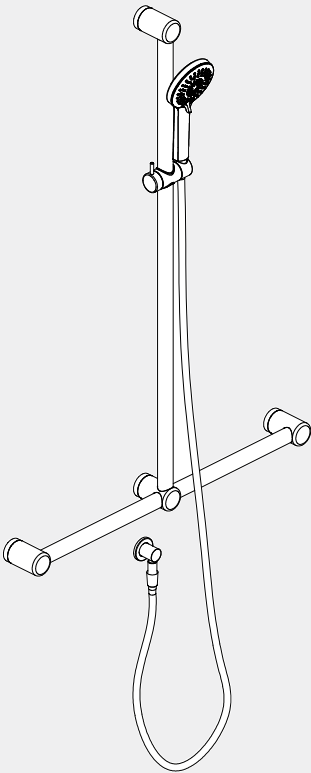

Versions:202510

Drawing

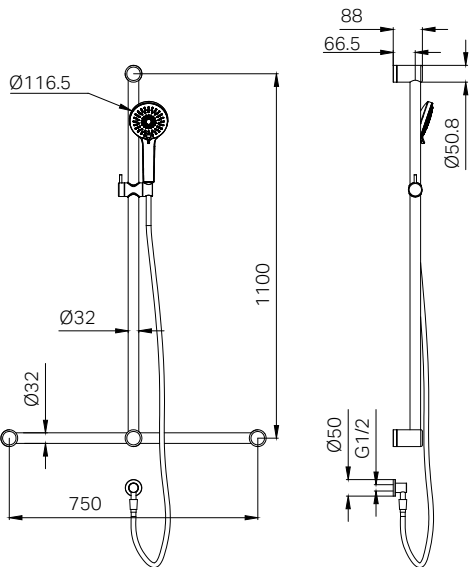

Specifications

Watermark License

WM-060093

Temperature Rating

Min 1°C-Max 75°C

Pressure Rating

Min 150kpa - Max 500kpa

Finish

Chrome
25C078CH

Matte Black
25C078MB

Gun Metal
25C078GM

Brushed Gold
25C078BG

Packaging Includes

- 1x 750mm Grab Rail
- 1x 1100mm Grab Rail
- 1x Hand Shower
- 1x Elbow
- (Built-In Dual Check Valves)
- 1x 1.5m PVC Hose
- 1x Installation Kits



*Dimensions are nominal measurements only.

INSTALLATION INSTRUCTION

GENERAL INSTRUCTIONS AND WARNINGS



- These rails are designed to be mounted onto wall studs or masonry walls.
- Installation is recommended to be completed by qualified trades person who complies with the AS 1428.1-2009 design for access and mobility standard.
- It is recommended rail location is determined by a qualified occupational therapist or trained professional to the AS 1428.1-2009 standard.
- Correct installation is required to ensure safe, long term operation. Incorrect mounting can result in reduced capacity of the rail which can result in injury to user and damage to the wall.

INSTALLATION STEPS

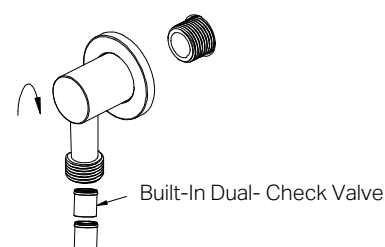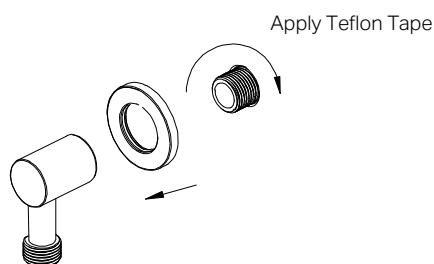

1. Apply Teflon tape to the outlet pipe threads. Slide plate onto elbow, and screw elbow onto outlet.


3. Screw elbow onto outlet.
Note: Dual check valves are pre-installed in the elbow.

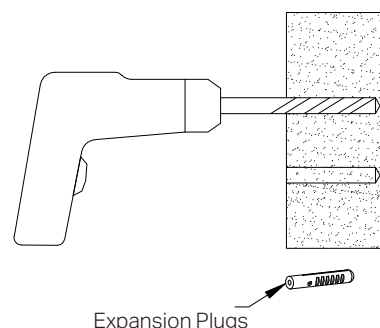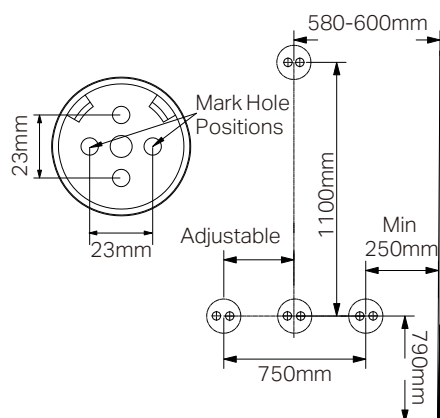


4. Locate wall studs, install into at least one stud. Place wall seal/mounting bracket on wall at correct height over centre of stud and mark hole positions on wall refer to above picture.
Tip: Rail height is 790mm above the ground.

5. Drill pilot holes into wall stud approximately 60mm deep to suit mounting screws (and wall plugs if required).


Tip: 3mm hole for screws into timber or 8mm hole for wall plugs.

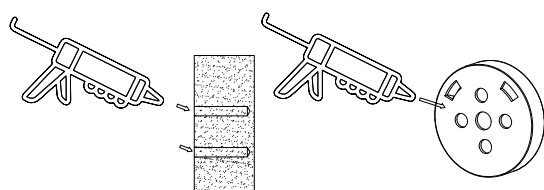

6. Apply small amount of silicon to mounting bracket and wall in and around the screw holes.

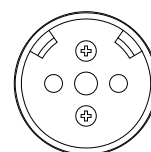


7. Install mounting brackets by screwing onto wall.
Tip: Use appropriate mounting screws for the wall stud material, supplied screws are for timber wall studs.

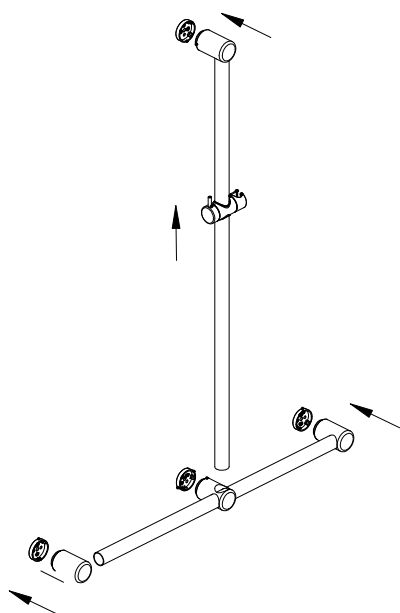


8. Slide the shower slider onto rail, then slide rail tubes into end brackets and push onto wall brackets, refer to above picture.

Tip: Horizontal rail or vertical rail can be cut down to a smaller size, simply use an angle grinder, hacksaw or pipe cutter then deburr the end with a file or grinder and reinsert into the end bracket.

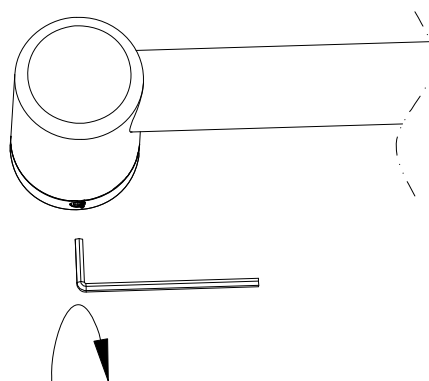


9. Tighten grub screws with Allen key.

Tip: If rail rattles, loosen end bracket, twist slightly and tighten.

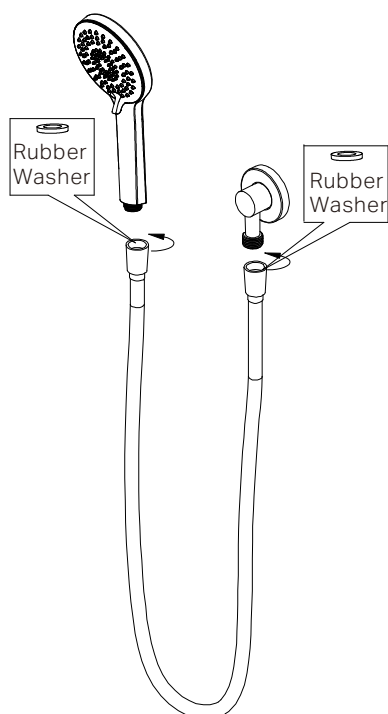

10. Connect hand shower and elbow by shower hose.

Tip: There are two rubber washer in the shower hose.

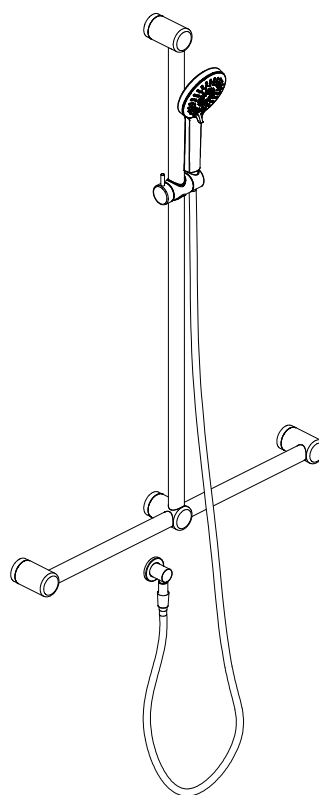

9. Test and check for leaks.

