




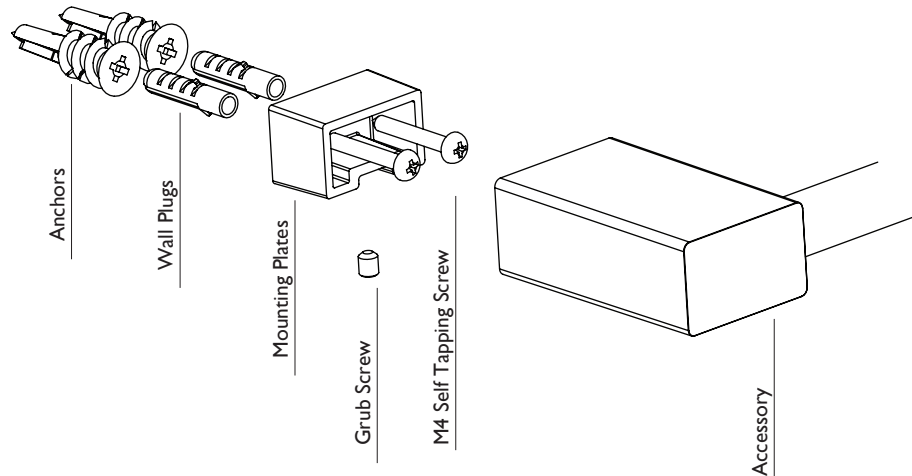

1 Place fixing plates where accessory is to be mounted. Mark center position of slotted holes.

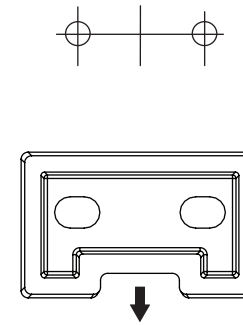


Note: Ensure dimple points downwards

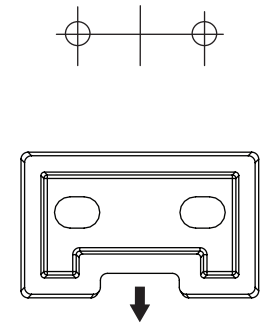


Note: Ensure dimple points downwards

2 Using a 6mm masonry drill bit, drill 2 holes 30mm deep for each mounting plate (4 in total).
Concrete Wall: Press Plugs into Holes
Plasterboard: Screw Anchors into Holes

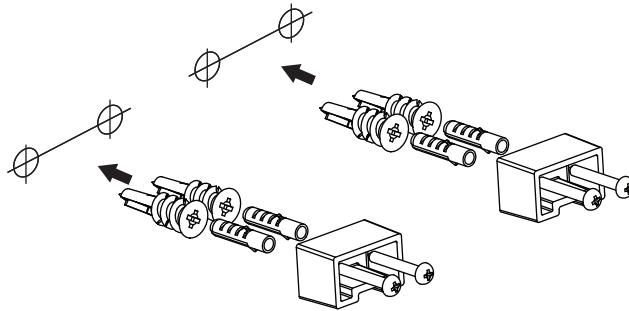


Place mounting plates into position.
Insert screws and tighten firmly with a Phillips Head screwdriver

3 Ensure both Mounting Plates are level.

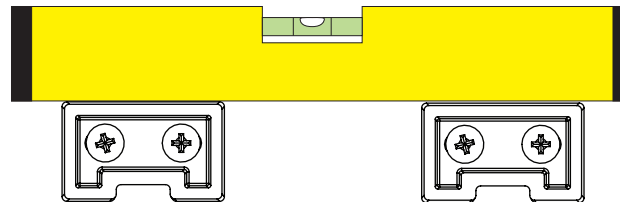

4

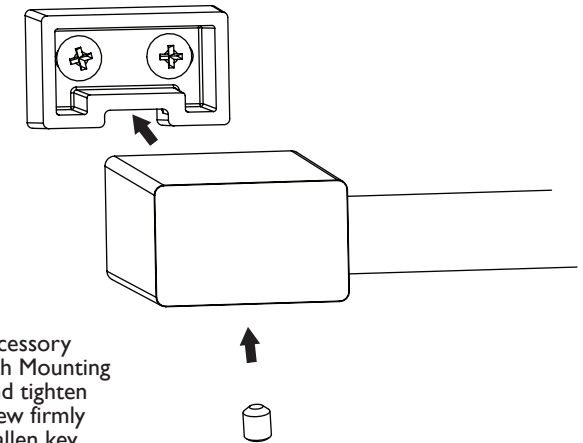

Place Accessory over both Mounting Plates and tighten grub screw firmly with an allen key.

WARRANTY:

Please refer to the full warranty statement enclosed with the product before installing. Or visit www.phoenixtapware.com.au to download a copy.

MAINTENANCE AND CARE:

- Products should be cleaned with mild liquid detergent or soap and water.
- Do not use cream cleaners or citrus based cleaning products, as they are abrasive.
- Use of unsuitable cleaning agents may damage the surface. Any damage caused in this way will not be covered by warranty.

DISCLAIMER:

While we aim to ensure the specifications shown are correct at the time of printing, Phoenix Tapware reserves the right to make modifications without prior notice. Always use the physical product measurements for mark-ups and roughing-in as the line drawing shown may differ from the actual product over time.

This product is suitable for all construction methods; Timber, brick, rammed earth etc - Provided it is installed to the guidelines specified in this instruction.

*All measurements are shown in millimeters.