


BREACH SET-UP:
Total adjustment range measured from Noggin to finished wall surface is **55mm to 68mm**.

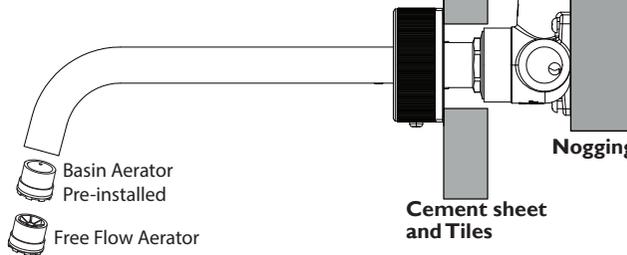


CONVERTING TO BATH FILLER:
Remove Basin Aerator from the outlet with the aerator key. Install Free Flow Aerator to the outlet.


recommended working pressure
150-500 KPa
maximum hot water temperature
55 degrees

NOTE:
- If the pressure exceeds or is likely to exceed 550kpa, an approved pressure limiting device must be installed.
- Flush out all pipe work prior to installation.
- If the water temperature exceeds 55°C, an approved tempering valve must be fitted.
- Installation should comply with Australian standard AS3500.1 or relevant local authority requirements. Showers may not be suitable for use within:
• Gravity-fed water systems

1 Mount the Mixer Body in place using the wood screws provided. Ensure that Mixer Body is level.
Connect hot and cold water supplies.
Test and check for leaks.

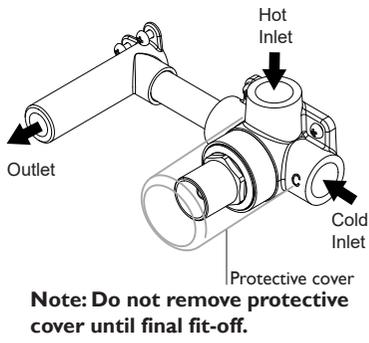


5 Fit Spindle Adaptor onto the cartridge spindle, ensuring that "UP" arrow points vertically upward.
Secure Spindle Adaptor with M4 Screw provided.
Turn Spindle Adaptor Anti-Clockwise until the cartridge is set to OFF position.

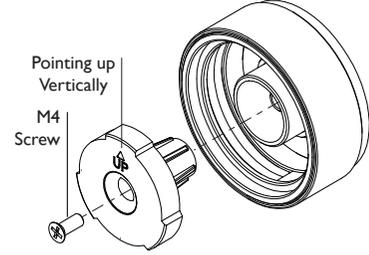


• Pressure supply less than 150kPa;
NOTE: After installing this product, retighten the flow controller housing to prevent removal by hand.
Failure to comply with the above may void all warranties.
WARRANTY:
Please refer to the full warranty statement enclosed with the product before installing. Or visit


2 Create a 45mm diameter hole and a 30mm diameter hole in the finished wall surface as shown.

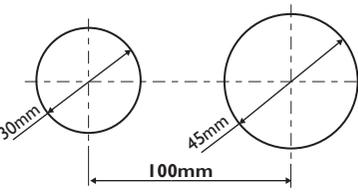


6 Fit Spindle Sleeve over the Spindle Adaptor. Tighten Handle Screw to secure Spindle Sleeve.
Ensure an O-Ring is attached to Front Cover.
Apply some grease or soapy water to the O-Ring if necessary. Push Front Cover into Handle Assembly.

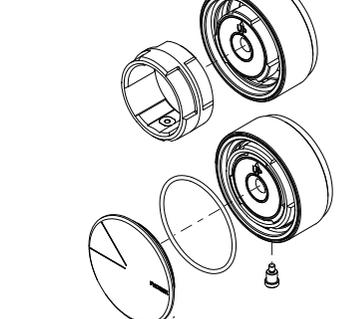


3 Remove the protective cover.
Turn the spindle Anti-Clockwise with Spindle Adaptor until the cartridge is set to OFF position.
Remove Spindle Adaptor.

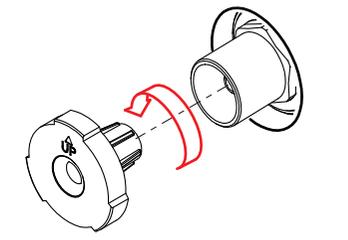


7 Apply teflon tape to the elbow thread.
Ensure that O-Ring is fitted to the spout base.
Screw the spout base onto the elbow thread with a spanner.

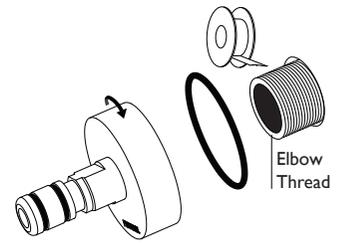

4 Fit O-Ring to the base of the handle assembly.
Secure Handle Assembly by tightening Locknut with a 1" Hex tube spanner. Ensure Red Rubber Indicator points vertically downward.
Remove Red Rubber Indicator

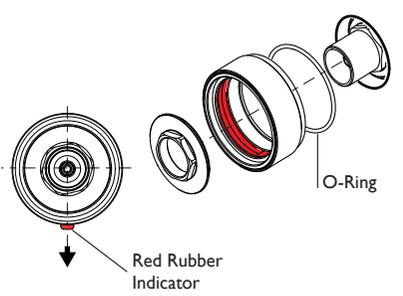

8 Push the spout onto the spout base.
Fasten Grub Screw.
TEST & CHECK FOR LEAKS

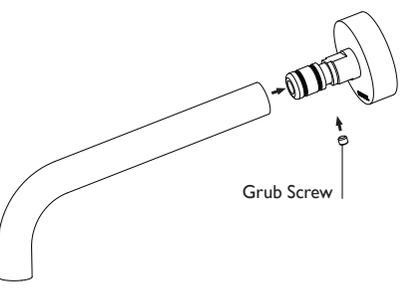

MAINTENANCE AND CARE:
- Products should be cleaned with mild liquid detergent or soap and water.
- Do not use cream cleaners or citrus based cleaning products, as they are abrasive.
- Use of unsuitable cleaning agents may damage the surface. Any damage caused in this way will not be covered by warranty.

DISCLAIMER:
While we aim to ensure the specifications shown are correct at the time of printing, Phoenix Tapware reserves the right to make modifications without prior notice. Always use the physical product measurements for mark-ups and roughing-in as the line drawing shown may differ from the actual product over time.
*All measurements are shown in millimeters.