



ADJUSTMENT RANGE

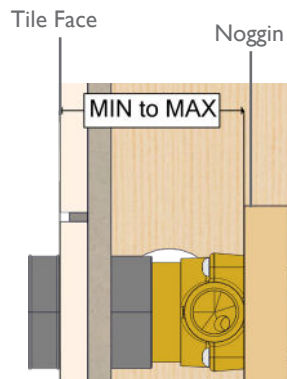


MIN: 68mm
MAX: 80mm


- 1** Screw the Mixer Breach onto Noggin. Ensure that the mixer body centres are level.

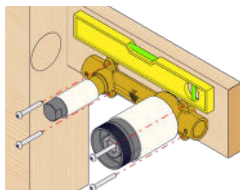


Remove Plastic Locknut. Apply grease to Rubber O-Rings and install into Plastic Sleeve.

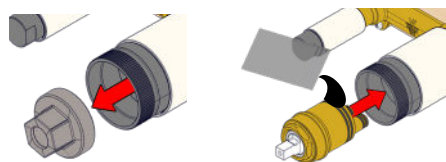


Connect hot and cold water supply. Test and check for leaks. Reinstall plastic locknut.

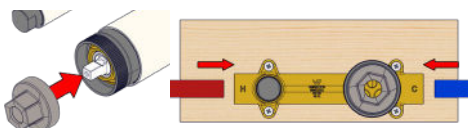


- 2** Seal waterproofing membrane up to waterproofing sleeves.

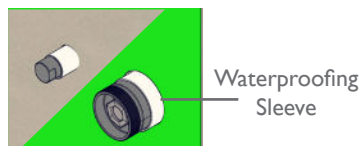

Use knife to trim Waterproofing Sleeves until flush with tile face.

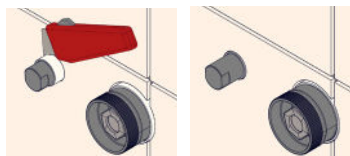


Unscrew protective covers from Rough In Body.

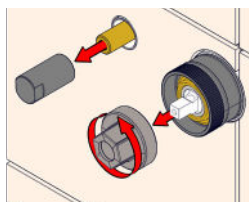

- 3** Unscrew Cartridge protective cover. Removing Cartridge.


Threaded Elbow

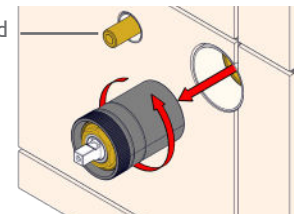

Apply Teflon Tape to Threaded Elbow.

Push Outlet Washer onto threaded Elbow.


Screw Outlet Adapter onto Outlet Washer.

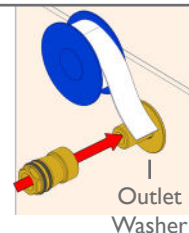

Outlet Washer

Screw Wall Mixer Flange onto Rough In Body.



Wall Mixer Flange

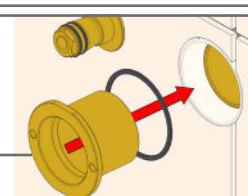


- 4** Using supplied Adjustment Spanner tighten Wall Mixer Flange.

Apply supplied grease to Rubber O-Rings. Slide Cartridge into position.

Tighten Cartridge Locknut onto Wall Mixer Flange.

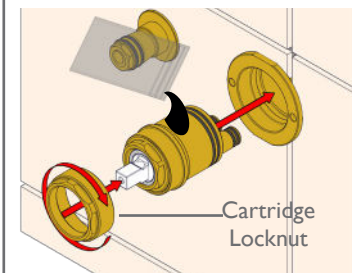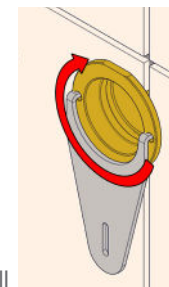


HOLE DIMENSIONS

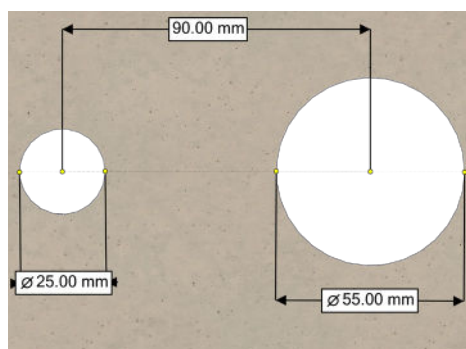

- 5** Push Wall Outlet onto the Spout Adapter.


Push Dress plate onto Cartridge and tighten Mixer Dome into place.

Fix Handle into position.

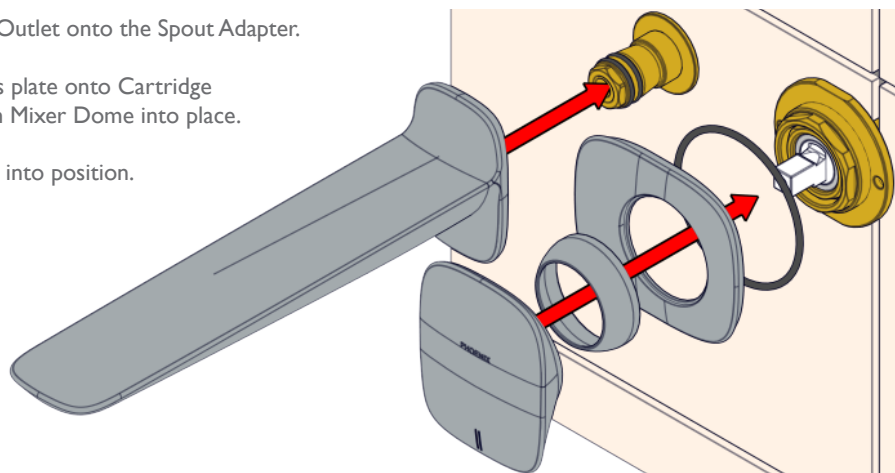

- 6**

Tighten Grub Screws to secure both Mixer Handle and Wall Outlet into place.

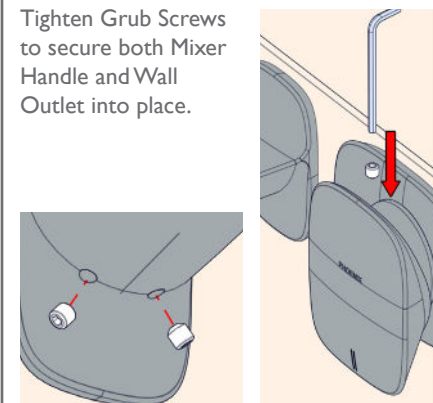

recommended working pressure
150-500KPa
maximum hot water temperature
75 degrees

NOTE:

- If the pressure exceeds or is likely to exceed 550kPa, an approved pressure limiting device must be installed.
- Flush out all pipe work prior to installation.
- If the water temperature exceeds 75°C, an approved tempering valve must be fitted.
- Installation should comply with Australian standard AS3500.1 or relevant local authority requirements.
- Showers may not be suitable for use within:
 - Gravity-fed water systems
 - Some instantaneous hot water systems; or

- Pressure supply less than 150kPa;

NOTE: The 500kPa maximum water supply pressure does not apply to fire service outlets.

Failure to comply with the above may void all warranties.

WARRANTY:

Please refer to the full warranty statement enclosed with the product before installing.

MAINTENANCE AND CARE:

- Chrome plated surfaces should be cleaned with mild liquid detergent or soap and water.
- Do not use cream cleaners or citrus based cleaning products, as they are abrasive.
- Use of unsuitable cleaning agents may damage the surface. Any damage caused in this way will not be covered by warranty.

DISCLAIMER:

While we aim to ensure the specifications shown are correct at the time of printing, we reserve the right to make modifications without prior notice. Always use the physical product measurements for mark-ups and roughing-in as the line drawing shown may differ from the actual product over time.

*All measurements are shown in millimeters.