

Care 400 Connector Suite

4.5/3 litre Vitreous China Connector Toilet Suite.

Dual Flush Toilet Suite for accessible application installations complying to the WC pan requirements to AS 1428.1-2009.

A pedestal type 4.5/3 litre dual flush **400 Care** toilet suite installation designed to provide a raised seat height of between 460-480mm for accessible applications . The pan features a concealed trap which facilitates easy cleaning. The versatility of the **Care 400** suite makes it ideal for use by both the ambulant people with disabilities and wheelchair users including wheeled commode chairs.

Important: Further reference must be made to AS 1428.1-2009 with current amendments to determine circulation space, grabrail and installation requirements. The dimensions in this sheet may change with amendments to the standard.

Pan: Trident Care Pan with concealed trap, 4.5 litre full flush washdown type.

Traps: S trap, unvented only.

Inlet: 50mm back inlet.

Cisterns: Sovereign Cistern (wall fix version) with Care raised chrome plated metal push button.

Inlet Valve and Overflow: Standard Bottom Entry Cistern

– available as right hand inlet which is interchangeable and incorporates Quietflow inlet valve. Internal overflow only.

Important: Working pressure minimum 30kPa to maximum 1000kPa flow pressure. Rain water tank compliant.

Position of the Pan: For wheel chair access the installed pan must be 800 ± 10 mm from the front of the pan to the finished wall and provide a seat height of 460 to 480mm. The projection requirements for people with ambulant disabilities that is suitable for this suite is 635 to 660mm.

Position of the Cistern: The underside of the cistern must be 600mm minimum from the finished floor. The push button height must be no greater than 1100mm from the finished floor.

Seats: Recommended Caroma seats - **Caravelle Care**, single or double flap options (refer to SEATS section for colour options and further details).

Installation: Refer to *Important Information for Plumbers* section.

Colours: White only.




Backrest Sold Separately





Caroma Care Push Button



Care 400 Connector Suite (continued)

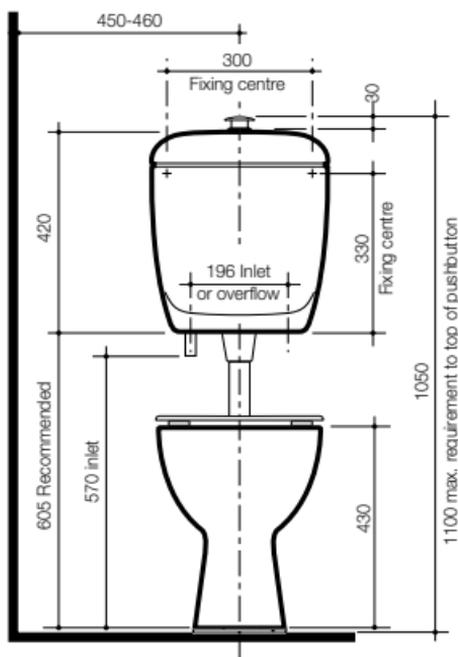

* Reference must be made to the AS 1428.1-2009 Amd 1 to confirm installation requirements.

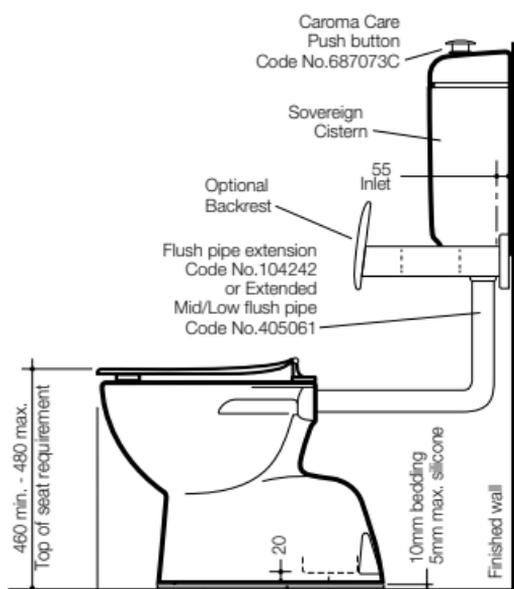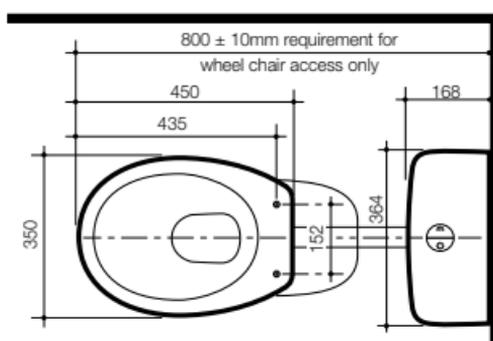

Note: The projection requirements detail on this illustration are for wheel chair access only. The projection requirements for people with ambulant disabilities that is suitable for this suite is 635 to 660mm.

For height dimensions to underside of pan, make allowance for mortar bedding.